
Warranty and Service Policy

Product Warranty

Dataq Instruments, Inc. warrants that its hardware will be free from defects in materials and workmanship under normal use and service for a period of one year from the date of shipment. Dataq Instruments' obligations under this warranty shall not arise until the defective material is shipped freight prepaid to Dataq Instruments. The only responsibility of Dataq Instruments under this warranty is to repair or replace, at its discretion and on a free of charge basis, the defective material.

This warranty does not extend to products that have been repaired or altered by persons other than Dataq Instruments employees, or products that have been subjected to misuse, neglect, improper installation, or accident.

Dataq Instruments shall have no liability for incidental or consequential damages of any kind arising out of the sale, installation, or use of its products.

Service Policy

1. All products returned to Dataq Instruments for service, regardless of warranty status, must be on a freight-prepaid basis.
2. Dataq Instruments will repair or replace any defective product within 5 days of its receipt.
3. For in-warranty repairs, Dataq Instruments will return repaired items to the buyer freight prepaid. Out of warranty repairs will be returned with freight prepaid and added to the service invoice.

Table of Contents

Warranty and Service Policy	i
Product Warranty	i
Service Policy	i
Table of Contents	iii
1. Introduction	1
Features.....	1
Analog Input.....	2
Analog Output.....	2
Digital Input and Output	2
Digital Signal Processor.....	2
2. Specifications	3
I/O Connector and Signal Connections	3
Interface Characteristics	3
Analog Inputs.....	3
Analog Outputs (DI-400 and DI-410 only).....	4
Digital Input/Output	4
Timing Input/Output	4
Input List Architecture.....	4
Output List Architecture.....	4
On-board DSP.....	5
Physical/Environmental.....	5
Gain and Other Special Considerations for -PGL Models.....	5
3. Getting Started	7
Unpacking.....	7
Configuring the DI-400 Series Board.....	7
Jumper Configuration	7
DIP Switch Configuration.....	8
Installing the DI-400 Series Board.....	10
4. Accessories.....	13
The DI-705: Signal Input/Output Option	13
General.....	13
Input Signal Configuration	13
The DI-75B: 5B Module Expander	13
The DI-725: Analog Channel Expander.....	13
CABL-4: Femal 37-pin “D” to 16 BNC Connectors.....	14
CABL-5: Male to Female 37-pin “D”	14
The DI-205: Signal Input/Output Panel.....	14
General.....	14
DI-205 Input/Output Panel Interconnections.....	14
Input Signal Configuration	15
Connecting a Single-ended Amplifier	16
Connecting a Differential Amplifier.....	16
Signal Cable and the Differential Amplifier	18
Increasing the Total Analog Input Channel Capacity	18
General.....	18
The DI-5002 Bare Board	19
The DI-5003 Bare Board	20
DI-500 Series Expander Instruments.....	21

Enabling Channels for Acquisition with WINDAQ Software	22
5. Calibration	23
Required Equipment	23
A/D Calibration.....	23
D/A Calibration.....	28
6. Block Diagram	29

1. Introduction

Congratulations on your purchase of a DI-400 Series data acquisition board. It permits data acquisition on IBM personal computers and compatibles from either Windows or the DOS programming environments.

This manual describes how to install and use the DI-400 Series analog and digital I/O board. It is assumed that you have a general understanding of data acquisition, digital I/O, and DSP operations, and that you possess enough proficiency in software to write your own application and/or diagnostic programs (unless you will be using ready-to-run WINDAQ software).

Features

The DI-400 Series board provides the following features:

- Per channel software-configurable settings:
 - Single-ended or differential input
 - Input gain
 - Sample rate
 - Signal Averaging
 - Channel expansion
 - Input and output measurement range
- Digital calibration of D/A converters
- 250kHz (DI-400) or 125kHz (DI-410) burst sampling rate. Note that it is possible to operate the DI-400 and DI-401 at a sample rate of 500kHz with some restrictions. Contact Dataq Instruments technical support for complete details.
- Eight each digital input and output lines
- A/D subsystem with up to 16 input channels provides 12-bit (DI-400 and DI-401) or 14-bit (DI-410) resolution.
- 256-entry input list allows you to scan analog signals, digital signals, or a mixed combination of analog and digital signals for signal processing operations. Any sequence of input channels may be sampled at any available gain, with unique single-ended/differential configurations. The 256-entry input list also allows you to average consecutive readings for low-noise output signals. Additionally, the 256-entry input list also allows you to output digital data while simultaneously scanning analog input signals.
- 256 counters are assigned to the input list allowing each channel to be programmed for a different sample rate.
- D/A subsystem provides 12-bit (DI-400) or 14-bit (DI-410) resolution.
- 16-entry output list allows you to write analog outputs, digital outputs, or a mixed combination of analog and digital outputs.
- 16 output counters allow each analog or digital output to be written at its own sample rate.
- Programmed I/O (PIO) data transfer modes
- Simultaneous input and output (mixed analog or digital I/O)
- Signal averaging of up to 65,536 consecutive readings per channel
- Supports analog pre- and post-triggering of data acquisition based on the level and slope of a specified channel

The following provides a brief overview of the major subsystems of DI-400 Series boards.

Analog Input

16 single-ended or 8 differential analog inputs allow your analog signals to be converted into 12-bit (DI-400 and DI-401) or 14-bit (DI-410) digital data via the onboard A/D converter. The board then transfers the digital data to user memory by PIO data transfer operations.

The DI-400 Series boards feature an input range of $\pm 10V$ (DI-400 and DI-410) or $\pm 5V$ (DI-401).

On DI-400 boards, the input gain is programmable. The DI-400-PGL has gains of 1, 10, and 100 to accommodate sampling of full-scale inputs to $\pm 100mV$ while the DI-400-PGH has gains of 1, 2, 4, and 8 to accommodate sampling of full-scale inputs to $\pm 1.25V$.

On DI-410 boards, the input gain is also programmable, but only with gains of 1, 2, 4, and 8 to accommodate sampling of full-scale inputs to $\pm 1.25V$.

Analog Output

The D/A subsystem on the DI-400 features two 12-bit D/A converters for outputting analog data.

The D/A subsystem on the DI-410 features two 14-bit D/A converters for outputting analog data.

An onboard 16-entry output counter list allows you to write analog or digital output at the maximum conversion rate of the board.

Digital Input and Output

DI-400 Series boards contain 8 each input and output lines for input/output operations. Digital inputs can monitor alarms or sensors with TTL outputs, while digital outputs can drive TTL inputs on control or measurement equipment.

Digital Signal Processor

DI-400 Series boards utilizes Analog Devices AD2181 DSP chip.

2. Specifications

I/O Connector and Signal Connections

All user connections are made to a single 37-pin D-shell connector as follows:

LL GND or DAC2*	19	37	CH1 HI IN
CH1 LO IN/CH9 HI IN	18	36	CH2 HI IN
CH2 LO IN/CH10 HI IN	17	35	CH3 HI IN
CH3 LO IN/CH11 HI IN	16	34	CH4 HI IN
CH4 LO IN/CH12 HI IN	15	33	CH5 HI IN
CH5 LO IN/CH13 HI IN	14	32	CH6 HI IN
CH6 LO IN/CH14 HI IN	13	31	CH7 HI IN
CH7 LO IN/CH15 HI IN	12	30	CH8 HI IN
CH8 LO IN/CH16 HI IN	11	29	DI7
DO5	10	28	PSEUDO-DIFFERENTIAL or NORMAL INPUTS*
DAC1	9	27	DO7
DO6	8	26	DO4
POWER GND	7	25	DI0
DI1	6	24	DI2
DI3	5	23	DO0
DO1	4	22	DO2
DO3	3	21	DI6
DI5	2	20	DI4
+5V PWR	1		

*Depends on jumper position

Interface Characteristics

Compatible bus	16-bit ISA or EISA
Expansion slot requirements	one, half-length, 16-bit slot
Addressable locations	100-3F0 ₁₆
Data path	16 bits
I/O address space	8 bytes

Analog Inputs

Number of input channels	16 single-ended, 8 differential (DI-400 and DI-410) 16 single-ended (DI-401)
Analog resolution	12-bit, 1 part in 4096 (DI-400 and DI-401) 14-bit, 1 part in 16,384 (DI-410)
Sampling rate	DI-401: 500,000 samples/sec with some restrictions. Call for details. DI-400: 250,000 samples/sec max, up to 500,000 with some restrictions. Call for details.
Relative accuracy	DI-410: 125,000 samples/sec max 0.05%
Integral nonlinearity	±1 LSB max
Differential nonlinearity	±0.9 LSB max
Maximum analog measurement range	±10V (DI-400 and DI-410) ±5V (DI-401)
Overvoltage protection	±30V

Common mode rejection ratio	80dB min @ $A_v=1$
Input impedance	1 M Ω minimum
Data Transfers	Programmed I/O
Gain ranges (software selectable per channel)	1, 2, 4, 8 or 1, 10, 100 (DI-400) 1, 2, 4, 8 (DI-410) 1 (fixed) (DI-401)

Analog Outputs (DI-400 and DI-410 only)

Number of channels	Two
Resolution	12-bit; 1 part in 4,096 (DI-400) 14-bit; 1 part in 16,384 (DI-410)
Data transfers	Programmed I/O
Update rate	100,000 Hz
Nonlinearity	± 1 LSB max
Differential nonlinearity	± 0.9 LSB max
Relative accuracy	0.05%
Output voltage range	± 10 V
Current drive capability	± 5 mA
Output settling time to 0.01%	10 μ s
Output impedance	0.3 Ω

Digital Input/Output

Capacity	8 each input and output
Compatibility	TTL compatible
Max source current	0.4mA @ 2.4V
Max sink current	8mA @ 0.5V
Digital input termination	4.7k Ω pull-up to +5VDC

Timing Input/Output

Number of input counters	256
Number of output counters	16
Resolution	1 part in 32,768
Base clock accuracy	0.01%
Counter input frequency	16 MHz

Input List Architecture

Positions	256 scan elements
Element size	32-bits
Element bit assignments:	
16 bits	Sample rate definition
D0-D3:	Channel number
D4:	Single-ended or differential
D5-D6:	Gain
D7:	Unipolar or bipolar
D8-D12:	Digital output bits (5)
D13:	Digital output bits on/off
D14:	Sample averaging on/off
D15:	Reserved

Output List Architecture

Positions	16 scan elements
Element size	32-bits
Element bit assignments:	
16 bits	Output rate definition
D0:	Specifies analog or digital output

D1:	Digital output bits on/off
D2-D7:	Don't care
D8-D15:	Digital output data

On-board DSP

Type	Analog Devices AD2181, 32 MIPS
Clock frequency	16 MHz external, 64 MHz internal
Data memory	16k words
Program memory	16k words

Physical/Environmental

Board dimensions	8.5 in by 4.25 in
I/O connector	37-pin male D-type
Operating environment:	
Component temperature	0° to 70° C
Relative humidity	5% to 90% non condensing
Storage environment:	
Temperature	-55° to 150° C
Relative humidity	5% to 90% non condensing

Gain and Other Special Considerations for -PGL Models

The DI-400 is offered in two models: the DI-400-*PGH* and the DI-400-*PGL*. The -*PGH* model offers programmable gain factors of 1, 2, 4, and 8 for high level inputs (hence low level gains) while the -*PGL* model offers programmable gain factors of 1, 10, and 100 for low level inputs (hence high level gains).

If you have a DI-400-*PGL* model instrument, you have the capability of applying relatively high gain factors. An undesirable characteristic that accompanies this capability is an industry-wide phenomenon known as cross talk. In a multiple channel system operating at high gain levels, cross talk is the tendency of information on one channel to bleed or leak to another channel. When acquiring multiple channels at high gain levels, the following guidelines should be observed to eliminate or minimize the effects of cross talk:

1. To greatly reduce cross talk, program each channel's gain so there is no more than a 10X difference between all channels. For example, when acquiring two channels, programming gains of 1 and 10 or 10 and 100 will greatly reduce cross talk. Similarly, when acquiring three channels, gains of 1, 1, and 10, or 10, 10, and 100 will work as well.
2. If the above solution is not possible, cross talk can be minimized by channel segregation. This is accomplished by applying one gain factor to single-ended channels 0 through 7 and a different gain factor to channels 8 through 15.

The cross talk specification for all -*PGL* models at a sample rate of 250kHz is less than -70db when both channel gains are less than 100. At a sample rate of 200kHz, crosstalk is less than -60db when one channel gain is equal to 100.

3. Getting Started

Unpacking

The following items are included with each DI-400 Series package. Verify that you have the following:

- DI-400 Series board
- *The WinDaq Resource* CD-ROM
- DI-400 PGH/PGL, DI-401, and DI-410 User's Manual (which you are currently reading)

If an item is missing or damaged, call Dataq Instruments at (330) 668-1444. We will guide you through the appropriate steps for replacing missing or damaged items. Save the original packing material in the unlikely event that your board must, for any reason, be sent back to Dataq Instruments.

Keep your DI-400 Series board in its protective anti-static bag until you are ready to install it. When you remove the board from the bag, hold it by the edges and do not touch the components.

Configuring the DI-400 Series Board

The DI-400 Series board has two jumpers that must be checked before the board is installed. The board also has a bank of DIP switches that must be configured before installation. Changing the configuration of these jumpers and switches (if need be) is much easier now before the board is installed in your computer. The locations of the switches and jumpers are indicated in FIGURE 1.

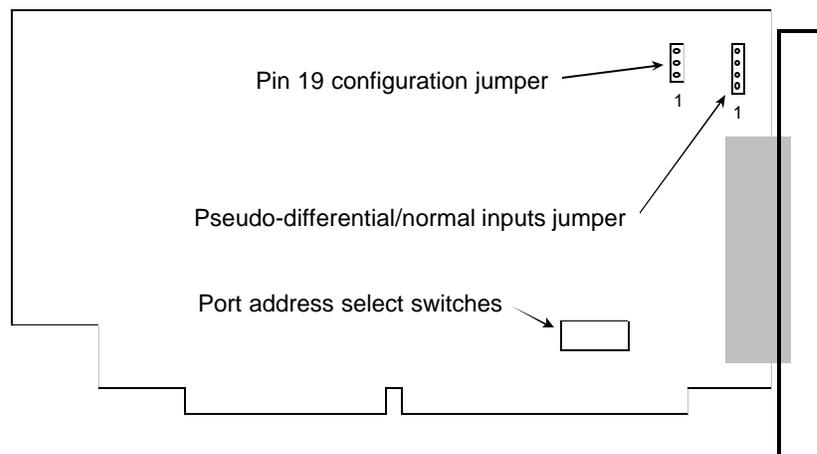


FIGURE 1
DI-400 Series board jumper locations

Jumper JP11 is used to configure the input channels for normal or pseudo-differential operation. Jumper JP13 configures pin 19 of the 37-pin I/O connector as analog ground or as DAC2.

Jumper Configuration

A jumper is a device used to configure a specific state, condition, or option. This is accomplished by installing the jumper over a pair of pins on the board, thus electronically connecting the two pins. The position of the jumper on the pins determine the state, condition or option.

To remove the jumper, grasp it firmly between thumb and forefinger and gently pull straight up, off of the pins and away from the board. To install the jumper, place it over the two desired pins, making certain that the pins line up with the two holes in the jumper, and push the jumper down until it is firmly seated.

The position of jumper JP11 configures the DI-400 Series inputs to operate in normal mode (16 single-ended or 8 differential inputs) or pseudo-differential mode (16 differential inputs all tied to a common return). The pseudo-differential mode uses the amplifiers low inputs for the common return.

All DI-400 Series boards are initially set for normal operation (pins 1 and 2 jumpered and pins 3 and 4 jumpered). To configure the DI-400 Series board for pseudo-differential inputs, completely remove one jumper and place the other jumper over pins 2 and 3. The configurations for JP11 are shown in FIGURE 2.

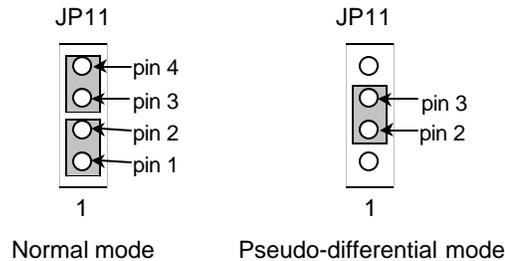


FIGURE 2
Jumper JP11 Configuration

The position of jumper JP13 determines the configuration of pin 19 on the 37-pin I/O connector. When the jumper is installed on pins 1 and 2, pin 19 is DAC2. When the jumper is installed on pins 2 and 3, pin 19 is analog ground. The configurations for JP13 are shown in FIGURE 3.

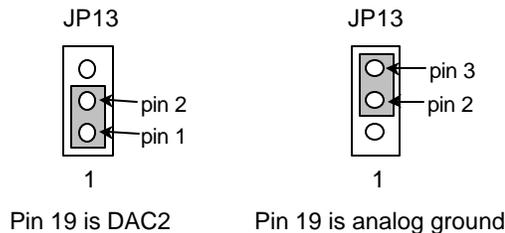


FIGURE 3
Jumper JP13 Configuration

DIP Switch Configuration

The board also has a bank of seven DIP switches that are used to configure the I/O port (or base) address of the DI-400 Series board.

These switches select the I/O port (or base) address for the DI-400 Series board. All DI-400 Series boards are initially set for a port address of 180_{hex}. In most instances, this port address is free (unused) and generally should work fine without reconfiguration. Unless you have an obvious conflict (another device in your computer is known to be using a port address of 180_{hex}), do nothing.

If you do have a port address conflict with another device, you will have to configure the DI-400 Series board for a port address other than 180_{hex}. The port address is used by your computer to locate the board during operation. A port address for any device installed in your computer must be unique to that device. Any overlap of port address ranges between two or more boards will cause improper operation.

DI-400 Series boards require 8 contiguous bytes of I/O space. Personal computers reserve 1024 bytes of memory (from 000_{hex} to 3FF_{hex}) for I/O devices. However, not all 1024 bytes of this I/O memory is available for the DI-400 Series board. This limits where you can place the DI-400 Series board in the I/O space. DI-400 Series boards can fit into any unoccupied 8-byte portion of I/O memory from 100_{hex} to 3F0_{hex}. The following table can be used as a guide for the selection of a port address suitable for the DI-400 Series board. It lists devices that normally occupy certain

port addresses. If your computer has a device installed that appears in the “Usually Used By:” column, then that port address should not be specified for the DI-400 Series board. Make sure that the DI-400 Series board’s port address is not set to an address already used by another device in your computer.

Hex Range	Usually Used By:
170-177	Fixed Disk Controller #2
1F0-1F7	Fixed Disk Controller #1
200-207	Game Port
238-23B	Bus Mouse
23C-23F	Alt. Bus Mouse
278-27F	Parallel Printer Port
2B0-2DF	EGA
2E0-2E7	GPIB (AT)
2E8-2EF	Serial Port
2F8-2FF	Serial Port
300-31F	Prototype Card
320-32F	Hard Disk (XT)
360-36F	Reserved
370-377	Floppy Controller #2
378-37F	Parallel Printer Port
380-38F	SDLC
3A0-3AF	SDLC
3B0-3BB	MDA
3BC-3BF	Parallel Printer Port
3C0-3CF	VGA EGA
3D0-3DF	CGA
3E8-3EF	Serial Port
3F0-3F7	Floppy Controller #1
3F8-3FF	Serial Port

Your board’s I/O port address is set with the DIP switches. These switches, shown in FIGURE 4, represent bits 3 through 9 of the port address (bits 0 through 2 do not matter) and are used to turn an address line either on or off. You can configure the DI-400 Series board for an I/O port address from 100_{hex} to 3F8_{hex} in increments of 8. Once again, the default selection is 180_{hex} and in most instances does not need to be changed. A switch setting is changed by flipping the switch. A switch in the ON position selects a 0 for the bit it represents. A switch in the OFF position selects a 1 for the bit it represents. Therefore, the value of an address line exists only when the switch is in the OFF position.

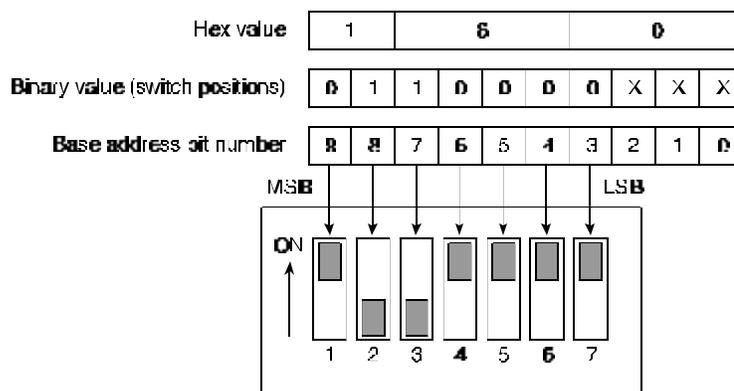


FIGURE 4

Switch configuration; default port address 180

When you have decided on a port address and verified the absence of conflicts, configure switches 1 through 7. Remember this port address setting. You will need it when you install the software. Incidentally, the port address is defined as the lower number in the range. For example, a port address range of 350 - 357 is referred to as 350.

Installing the DI-400 Series Board

After you have configured the jumpers and DIP switches (if needed), you are ready to install the DI-400 Series board in your computer.

1. Before you start, turn the power off on your computer.
2. Remove the computer's cover following the directions provided by your computer's manufacturer.
3. Locate your computer's expansion slots. Choose a 16-bit expansion slot into which the DI-400 Series board will be inserted. Note that a 16-bit slot is one characterized by dual expansion slot connectors (see FIGURE 5).
4. Using a screwdriver, remove the slot cover directly behind the dual expansion slot chosen in step 3 by removing the screw at the top (refer to FIGURE 5). The slot cover is no longer needed and may be saved or discarded at your discretion. Save the screw. You will need it to secure the DI-400 Series board to the rear panel.

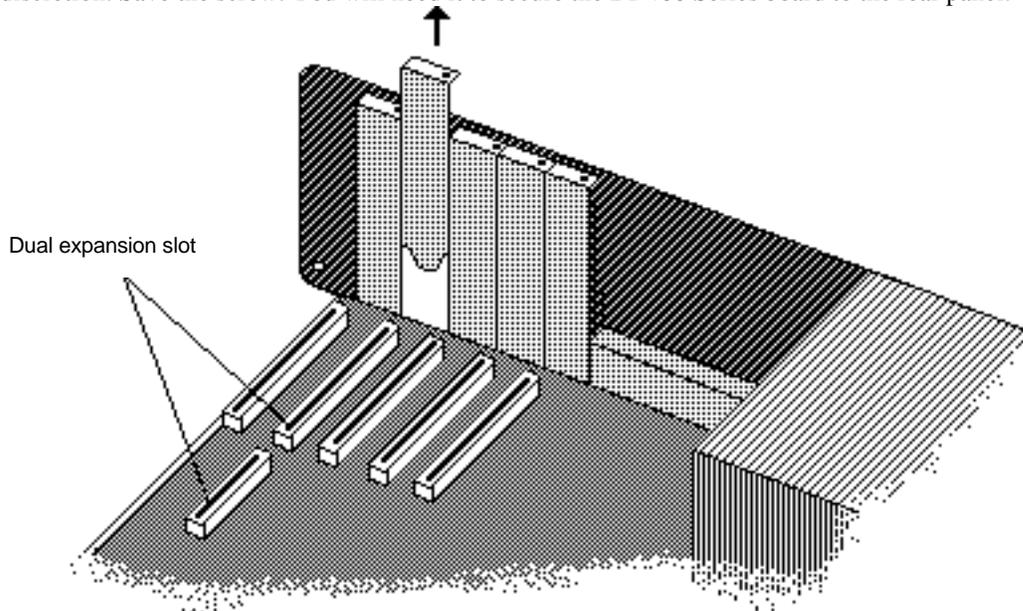


FIGURE 5
Removing the slot cover from the computer's rear panel

5. Pick up the DI-400 Series board and, holding it carefully without touching the gold-plated connectors, position the board so that the Option Retaining Bracket (ORB) at the rear of the board slides into the area previously occupied by the slot cover (refer to FIGURE 6). Note that since the gold-plated card edge connectors are inserted into the dual expansion slot, it is impossible to orient the board incorrectly.

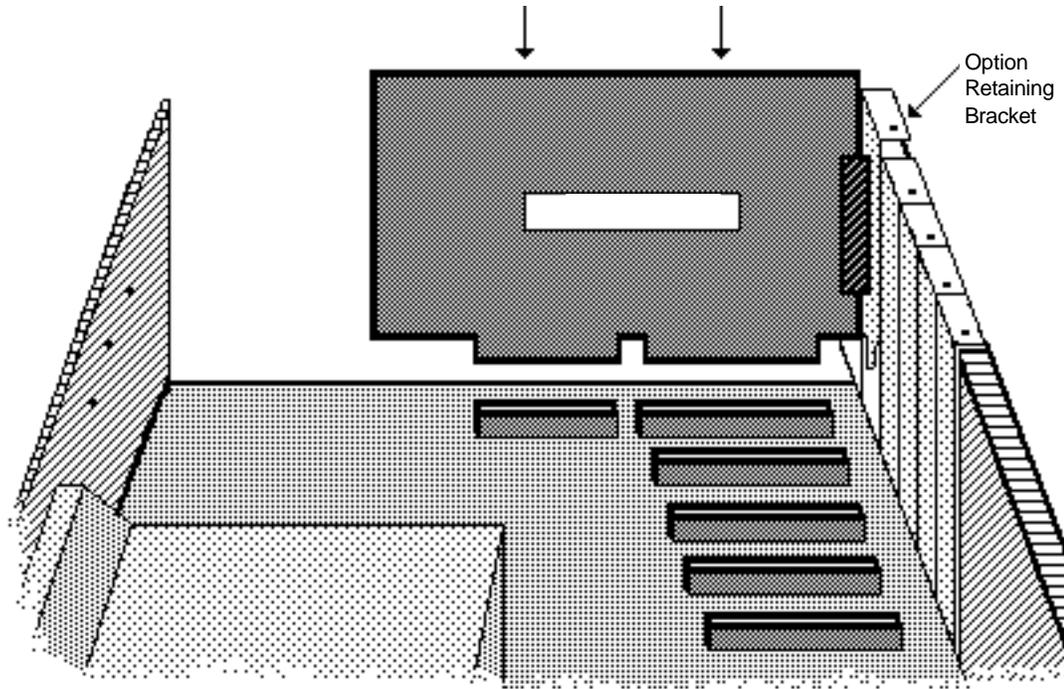


FIGURE 6
Installing the DI-400 Series card into the expansion slot

6. Position the DI-400 Series board over the chosen dual expansion slot. Put a thumb on the top edge of the board, rock it gently lengthwise to get it started, then press down firmly until the board is fully seated.
7. Install the screw laid aside in step 4 into the option retaining bracket to hold the board firmly in place.
8. Replace your computer's cover following the instructions provided by the manufacturer.

This completes the board installation. The next step required before you actually start using the DI-400 Series board is to install the software.

Two software options for DI-400 Series boards are WINDAQ software and the ActiveX Control Library, which supports LabVIEW, TestPoint, HP VEE, etc. The ActiveX Control Library is automatically installed with the installation of WinDaq Lite/Pro or Pro+. To begin the WinDaq software installation, insert *The WinDaq Resource* CD-ROM into your CD-ROM drive and select, "Install software for all other products except DI-194."

4. Accessories


This section describes hardware products that may be used with DI-400 Series boards. Contact Dataq Instruments for information on the latest available accessories.

The DI-705: Signal Input/Output Option

General

The DI-705 is a screw terminal signal interface that provides a convenient way to interface analog input and digital input/output signals to the DI-400. It plugs into the 37-pin “D” connector on the DI-400 and provides signal access through screw terminal strips. The terminal strips accept 16-22 gauge wire and each screw terminal is silk screened with the corresponding “D” connector pin number. The DI-705 also features a 37-pin male “pass-through” connector, which allows you to connect our BNC cable (model number CABL-4), or our DI-75B, or any 37-pin DAS-16 compatible cable to the DI-400 while still allowing screw terminal access.

Input Signal Configuration

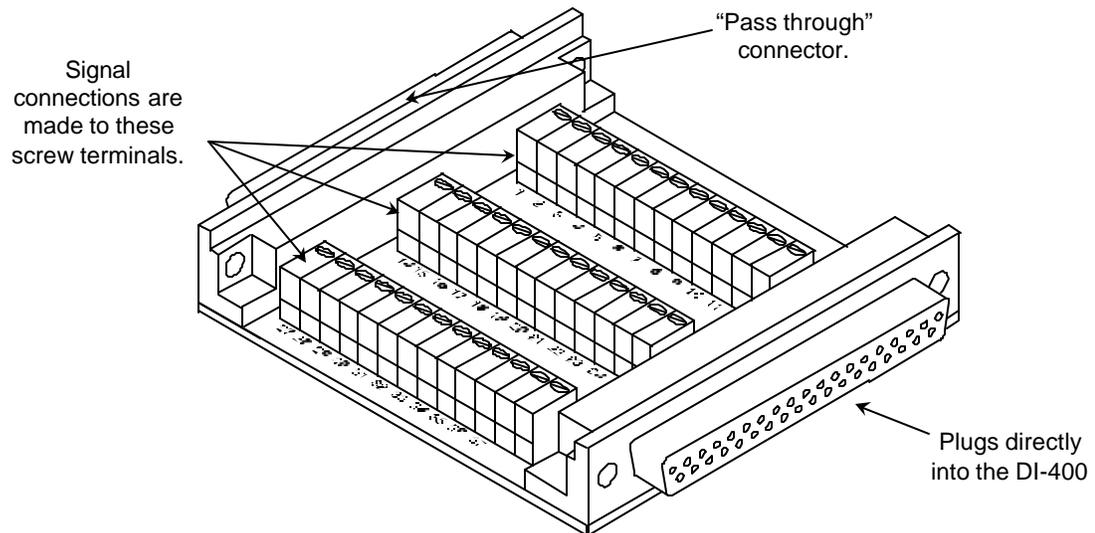

Any combination of single-ended or differential channels may be connected to the DI-705, but keep in mind a differential channel uses two analog inputs. Configure single-ended and differential channels on the DI-705 the same way as on the DI-400. Refer to the paragraph titled “I/O Connector and Signal Connections” in the Specifications section of this manual for single-ended/differential configuration details.

The DI-75B: 5B Module Expander

The DI-75B is an eight-channel expansion instrument that allows you to make isolated, industrial-type measurements with the DI-400. Each DI-75B measures 9”L × 7.29”W × 2.7”H and accepts up to eight DI-5B signal conditioning modules to bring thermocouple, true rms, voltage, strain, frequency, process current, RTD, potentiometer, and DC transducer measurement capability to the DI-400, in any combination suitable for your application.

The DI-725: Analog Channel Expander

The DI-725 is a 32-channel analog expansion device that allows you to increase the analog input channel capacity of the DI-400. Each DI-725 measures 9”L × 7.29”W × 1.52”H and features 32 differential analog inputs, dual programmable gain amplifiers with gain selections of 1, 2, 4, and 8; and a ±10 volt full scale measurement range (at

a gain of 1). The DI-725 derives its power from the host DI-400 and in most cases will not require an additional power supply.

CABL-4: Femal 37-pin “D” to 16 BNC Connectors

CABL-4 is an interface cable that allows you to use the DI-400 with any device that uses BNC-style connectors. CABL-4 features a 37-pin female “D” connector on one end that mates directly with the DI-400 and 16 BNC connectors on the other, each individually labeled.

CABL-5: Male to Female 37-pin “D”


Instead of directly connecting the DI-705 to your DI-400 instrument, six-foot long CABL-5 can be used between them to allow more accessibility when connecting your input signals to the DI-705.


The DI-205: Signal Input/Output Panel

General

The DI-205 is a termination panel for general purpose input and output. The DI-205 along with the supplied three-foot cable provides a convenient way to interface digital input/output, analog output, and analog input signals to DI-400 Series boards. Signal connection is via terminal strip for digital and analog output signals, or 5-way binding posts (banana sockets) for analog input signals.

DI-205 Input/Output Panel Interconnections

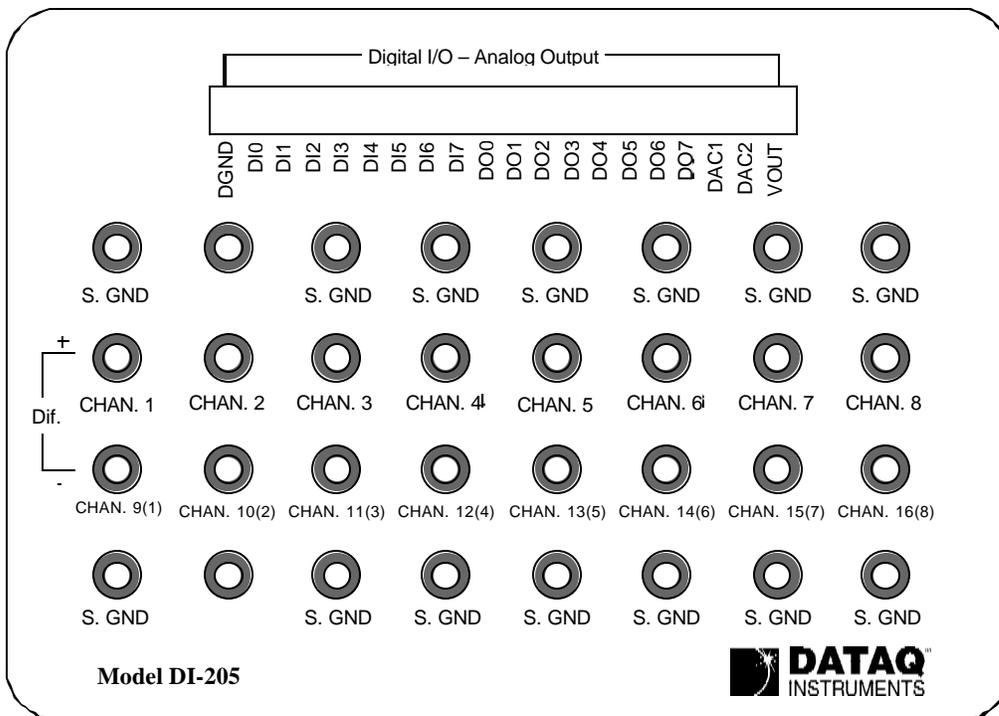

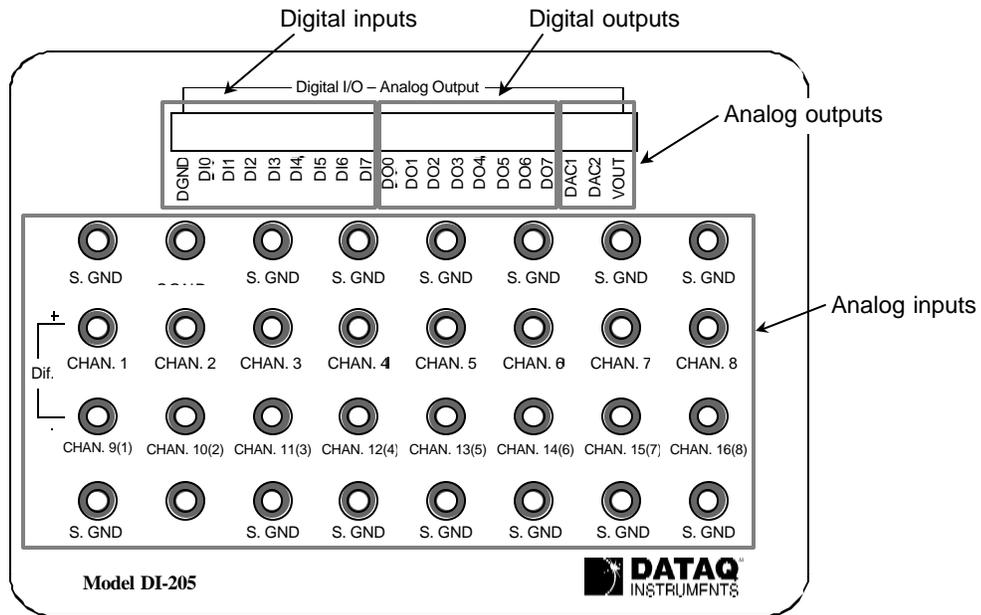

Digital Inputs (DI0 to DI7)

The left end of the 20-connector screw terminal labeled “DGND” and “DI0” through “DI7” indicate the digital input ports of the DI-205.

Digital Outputs (DO0 to DO7)


The 8 digital output lines labeled “DO0” through “DO7” indicate the digital output ports of the DI-205.

Analog Output (DAC1, DAC2, VOUT)

The digital to analog converter (DAC) outputs have two applications: As a general purpose analog output accessible through WINDAQ or Programmer’s SDK software or as a variable signal suppression voltage automatically enabled and multiplexed to all channels through Programmer’s SDK software.

Input Signal Configuration


The DI-205 may be configured to connect to 16 single-ended or 8 differential channels. In addition, any combination of single-ended or differential channels may be applied. A differential channel is configured by using two single-ended inputs according to the following illustration:

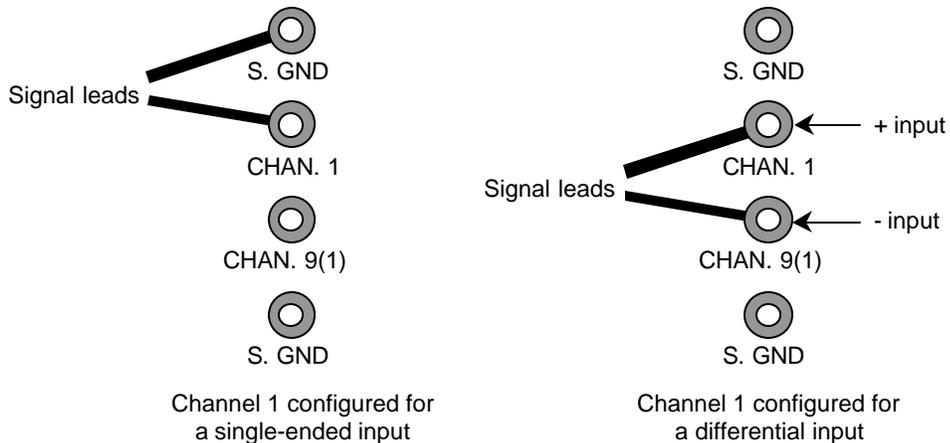

Note that when an input channel is configured for differential operation, the binding post associated with that channel's high (+) input assumes the channel number.

Connecting a Single-ended Amplifier

A single-ended amplifier is the most straight forward approach to connecting signals to the DI-205. However, to derive adequate performance, the use of a single-ended amplifier requires that the signal to be measured is relatively high level (i.e. $\geq 1\text{v}$ full scale), and the distance from the signal source to the DI-205 is relatively short (≤ 15 feet). Assuming these conditions exist, a single-ended amplifier may be connected to your signal source as follows:

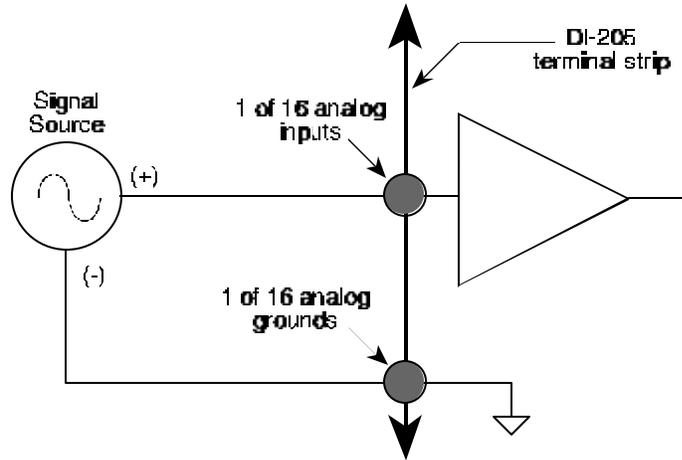


Connecting a Differential Amplifier


A differential channel configuration is a special case approach to signal measurement that should be used with all low-level measurements (i.e., when an input signal $< 1\text{v}$) or when the signal to be measured is located far away from the DI-205 (i.e., > 15 feet). When in a differential operating mode, the DI-205 amplifier sees the difference in voltage between the high (+) and low (-) inputs. Differential amplifiers have the advantage of reducing common mode voltages (i.e., those appearing simultaneously and in phase on both inputs). This capability may be leveraged to great advantage to reduce noise riding on a signal of interest.

Two signal measurement conditions govern your configuration of a differential channel input: The signal to be measured is ground-referenced; or the signal to be measured is isolated from ground.


Ground-referenced Signal Sources — A ground-referenced signal source is one with a local ground that may not be (and probably is not) at the same potential as the computer's ground. This potential difference between signal ground and computer ground is referred to as a common mode voltage and is caused by a number of different factors.

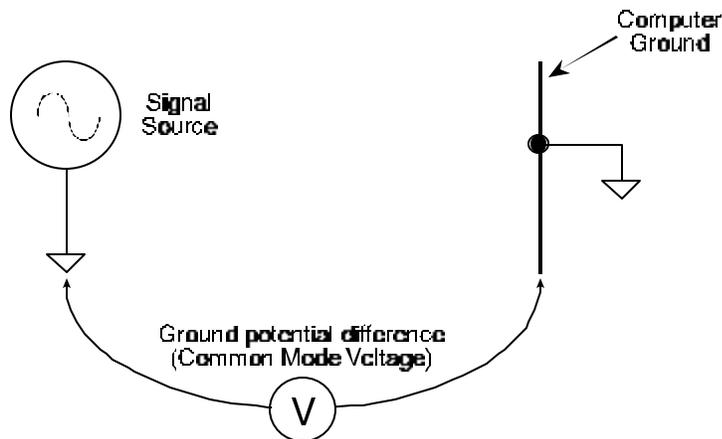

The most common of these is different physical locations of the computer and signal ground points. Since wire is not a perfect conductor (i.e. exhibiting zero resistance regardless of length) a voltage drop, however small, will always be present. The differential amplifier is unique in its ability to measure signals originating from sources with different ground potentials relative to the computer *providing it is connected properly*.

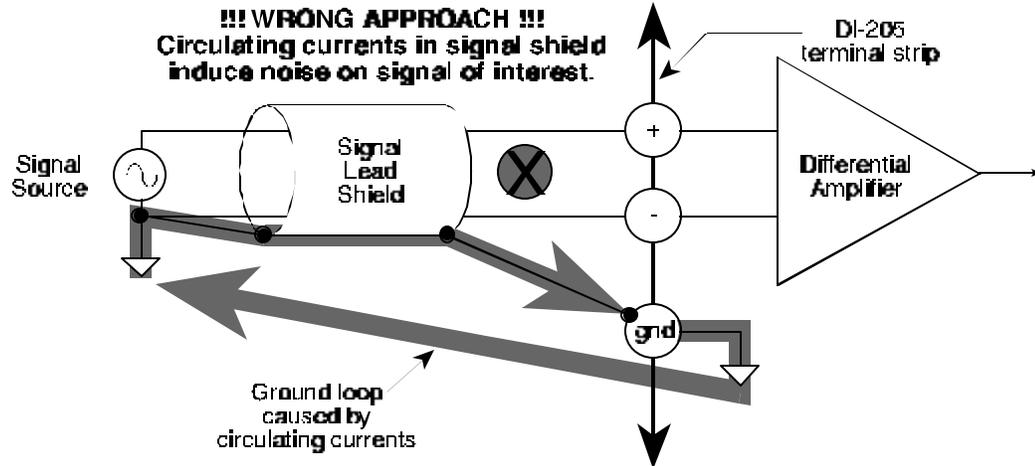


The most common error made in connecting differential amplifiers is the tendency to ground both ends of a signal shield. This causes current to flow through the shield and induces noise on the signal to be measured. This problem is eliminated by ensuring that only one ground exists on the signal circuit.

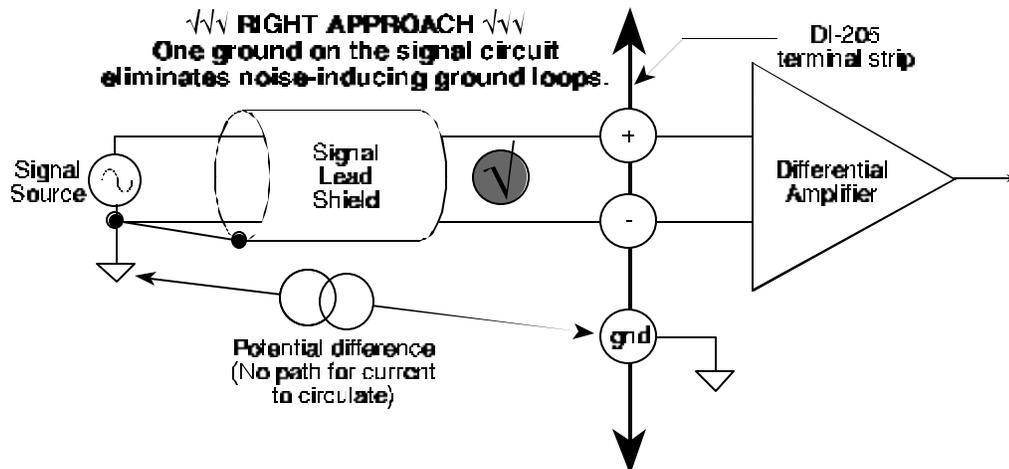


Isolated Signal Sources — There are two considerations when connecting a differential amplifier to an isolated signal source: The elimination of ground loops as described above, and the use of bias resistors to provide bias current for the differential amplifier's positive and negative inputs.

The bias resistors should be chosen to be as low as possible, but the value you use is dependent upon the output impedance of your signal source. Generally, the value of the bias resistor should be 10 times the output impedance of your signal source or higher. Bias resistors greater than $1M\Omega$ are not recommended.

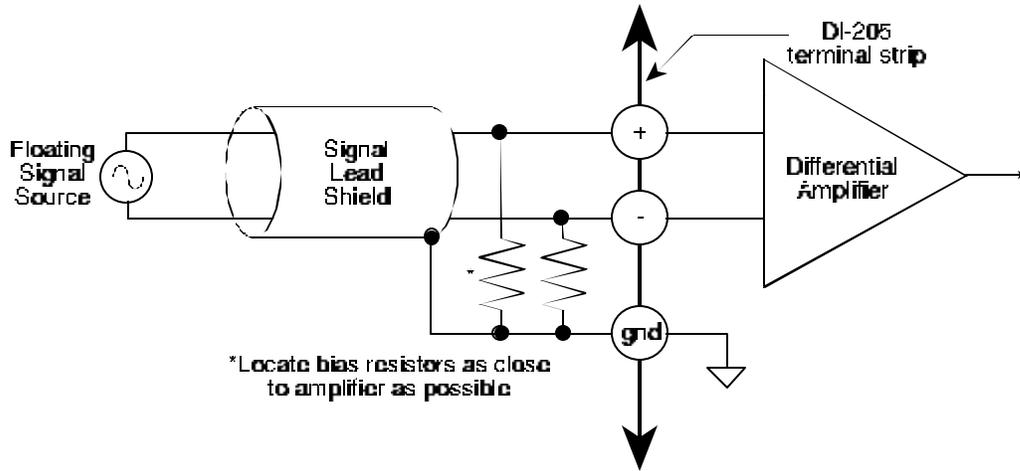

Signal Cable and the Differential Amplifier

A quick rule-of-thumb: Any application requiring a differential amplifier also defines a need for quality signal cable. Four elements combine to ensure adequate quality signal cable: a twisted signal pair with low resistance stranded copper conductors; surrounded by a multiple-folded foil shield; with a copper stranded drain wire; all contained within an insulated outer jacket.

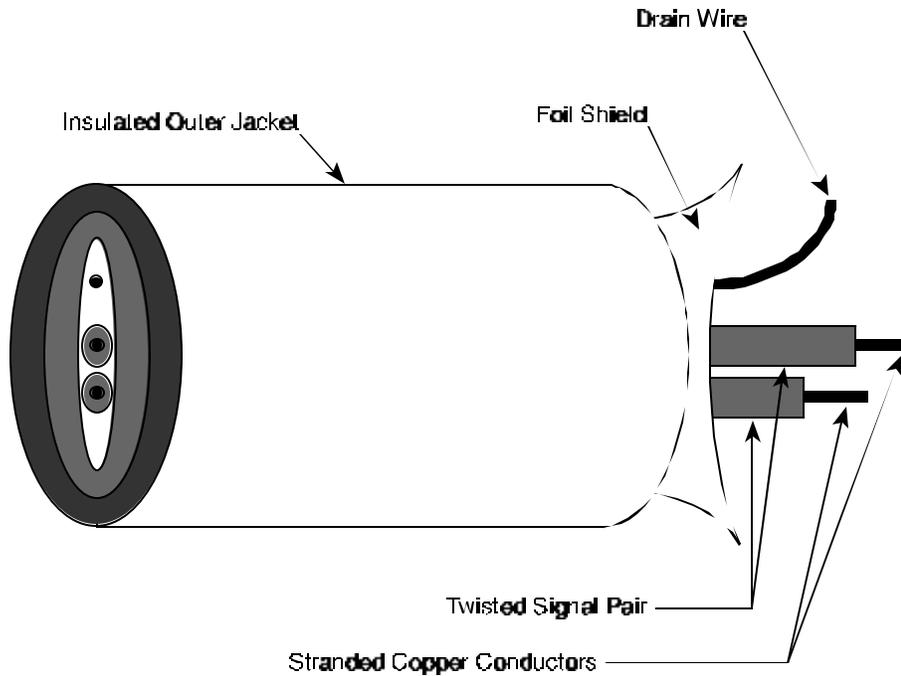

In applications where such signal cable is used, a dramatic decrease in noise pickup will be experienced. The drain wire should be considered as the shield and should be connected as described in the Connecting a Differential Amplifier section above. Signal cable meeting all four criteria for quality is Belden No. 8641.

Increasing the Total Analog Input Channel Capacity

General

Any one of several instruments can be connected to the DI-400 Series board to increase its total input channel capacity. These instruments are as follows:

“Bare Board” Instruments

DI-5002, DI-5003

DI-500 Series Expander Instruments

DI-500-32-DX

DI-500-32-PX

DI-510-32-DX

DI-510-32-PX

DI-510-64-DX

DI-510-64-PX

The DI-5002 is simply a bare board that provides economical, high-level input channel expansion capability for DI-400 Series boards. The DI-5003 is also an economical bare board, but it provides signal conditioned input channel capability (via DI-5B signal conditioning modules) for DI-400 Series boards. The DI-5002 and DI-5003 can be used by themselves or together, in various configurations, to get the desired mix of high-level and/or signal conditioned channels. The DI-500 Series Expander instruments provide all means of channel expansion capability for DI-400 Series instruments. They are a complete solution and feature a more finished appearance with portable, desktop, or rackmount enclosures and labeled overlays.


The DI-5002 Bare Board

To increase high-level input channel capacity with the DI-5002, simply connect the appropriate end of the included expansion cable to the DI-400 Series board and connect the other end of the cable to the 40-pin IDC connector labeled “IN” on the DI-5002 board (refer to the following illustration). Note that the connector on the DI-5002 board is “keyed”, therefore difficult to improperly connect. Power for the DI-5002 is derived from the DI-400 Series board, through the expansion cable.

The 40-pin IDC connector labeled “OUT” on the DI-5002 board can be used to further increase channel capacity. Several instruments can be “daisy chained” together by connecting additional expansion cables from the OUT connector of the DI-5002 board currently in use to the IN connector of another DI-5002 board.


All channel connections are now made at the DI-5002 instead of the DI-400 Series board. Refer to the following illustration for channel assignments.

26-pin connector pin-out				40-pin connector pin-out						
CH1	1	0	0	2	CH9	17	0	0	1E	CH9
COM	3	0	0	4	CH10	18	0	0	1F	CH10
CH2	5	0	0	5	COM	19	0	0	20	NC
CH3	7	0	0	6	CH11	21	0	0	21	NC
COM	9	0	0	7	CH12	23	0	0	22	NC
CH4	11	0	0	8	CH13	25	0	0	23	NC
CH5	13	0	0	9	CH14	27	0	0	24	NC
COM	15	0	0	10	CH15	29	0	0	25	NC
CH6	17	0	0	11	CH16	31	0	0	26	NC
CH7	19	0	0	12	CH17	33	0	0	27	NC
COM	21	0	0	13	CH18	35	0	0	28	NC
CH8	23	0	0	14	CH19	37	0	0	29	NC
NC	25	0	0	15	CH20	39	0	0	30	NC
				16	CH21	41	0	0	31	NC
				17	CH22	43	0	0	32	NC
				18	CH23	45	0	0	33	NC
				19	CH24	47	0	0	34	NC
				20	CH25	49	0	0	35	NC
				21	CH26	51	0	0	36	NC
				22	CH27	53	0	0	37	NC
				23	CH28	55	0	0	38	NC
				24	CH29	57	0	0	39	NC
				25	CH30	59	0	0	40	NC
				26	CH31	61	0	0	41	NC
				27	CH32	63	0	0	42	NC
				28	CH33	65	0	0	43	NC
				29	CH34	67	0	0	44	NC
				30	CH35	69	0	0	45	NC
				31	CH36	71	0	0	46	NC
				32	CH37	73	0	0	47	NC
				33	CH38	75	0	0	48	NC
				34	CH39	77	0	0	49	NC
				35	CH40	79	0	0	50	NC
				36	CH41	81	0	0	51	NC
				37	CH42	83	0	0	52	NC
				38	CH43	85	0	0	53	NC
				39	CH44	87	0	0	54	NC
				40	CH45	89	0	0	55	NC
				41	CH46	91	0	0	56	NC
				42	CH47	93	0	0	57	NC
				43	CH48	95	0	0	58	NC
				44	CH49	97	0	0	59	NC
				45	CH50	99	0	0	60	NC
				46	CH51	101	0	0	61	NC
				47	CH52	103	0	0	62	NC
				48	CH53	105	0	0	63	NC
				49	CH54	107	0	0	64	NC
				50	CH55	109	0	0	65	NC
				51	CH56	111	0	0	66	NC
				52	CH57	113	0	0	67	NC
				53	CH58	115	0	0	68	NC
				54	CH59	117	0	0	69	NC
				55	CH60	119	0	0	70	NC
				56	CH61	121	0	0	71	NC
				57	CH62	123	0	0	72	NC
				58	CH63	125	0	0	73	NC
				59	CH64	127	0	0	74	NC
				60	CH65	129	0	0	75	NC
				61	CH66	131	0	0	76	NC
				62	CH67	133	0	0	77	NC
				63	CH68	135	0	0	78	NC
				64	CH69	137	0	0	79	NC
				65	CH70	139	0	0	80	NC
				66	CH71	141	0	0	81	NC
				67	CH72	143	0	0	82	NC
				68	CH73	145	0	0	83	NC
				69	CH74	147	0	0	84	NC
				70	CH75	149	0	0	85	NC
				71	CH76	151	0	0	86	NC
				72	CH77	153	0	0	87	NC
				73	CH78	155	0	0	88	NC
				74	CH79	157	0	0	89	NC
				75	CH80	159	0	0	90	NC
				76	CH81	161	0	0	91	NC
				77	CH82	163	0	0	92	NC
				78	CH83	165	0	0	93	NC
				79	CH84	167	0	0	94	NC
				80	CH85	169	0	0	95	NC
				81	CH86	171	0	0	96	NC
				82	CH87	173	0	0	97	NC
				83	CH88	175	0	0	98	NC
				84	CH89	177	0	0	99	NC
				85	CH90	179	0	0	100	NC
				86	CH91	181	0	0	101	NC
				87	CH92	183	0	0	102	NC
				88	CH93	185	0	0	103	NC
				89	CH94	187	0	0	104	NC
				90	CH95	189	0	0	105	NC
				91	CH96	191	0	0	106	NC
				92	CH97	193	0	0	107	NC
				93	CH98	195	0	0	108	NC
				94	CH99	197	0	0	109	NC
				95	CH100	199	0	0	110	NC
				96	CH101	201	0	0	111	NC
				97	CH102	203	0	0	112	NC
				98	CH103	205	0	0	113	NC
				99	CH104	207	0	0	114	NC
				100	CH105	209	0	0	115	NC
				101	CH106	211	0	0	116	NC
				102	CH107	213	0	0	117	NC
				103	CH108	215	0	0	118	NC
				104	CH109	217	0	0	119	NC
				105	CH110	219	0	0	120	NC
				106	CH111	221	0	0	121	NC
				107	CH112	223	0	0	122	NC
				108	CH113	225	0	0	123	NC
				109	CH114	227	0	0	124	NC
				110	CH115	229	0	0	125	NC
				111	CH116	231	0	0	126	NC
				112	CH117	233	0	0	127	NC
				113	CH118	235	0	0	128	NC
				114	CH119	237	0	0	129	NC
				115	CH120	239	0	0	130	NC
				116	CH121	241	0	0	131	NC
				117	CH122	243	0	0	132	NC
				118	CH123	245	0	0	133	NC
				119	CH124	247	0	0	134	NC
				120	CH125	249	0	0	135	NC
				121	CH126	251	0	0	136	NC
				122	CH127	253	0	0	137	NC
				123	CH128	255	0	0	138	NC
				124	CH129	257	0	0	139	NC
				125	CH130	259	0	0	140	NC
				126	CH131	261	0	0	141	NC
				127	CH132	263	0	0	142	NC
				128	CH133	265	0	0	143	NC
				129	CH134	267	0	0	144	NC
				130	CH135	269	0	0	145	NC
				131	CH136	271	0	0	146	NC
				132	CH137	273	0	0	147	NC
				133	CH138	275	0	0	148	NC
				134	CH139	277	0	0	149	NC
				135	CH140	279	0	0	150	NC
				136	CH141	281	0	0	151	NC
				137	CH142	283	0	0	152	NC
				138	CH143	285	0	0	153	NC
				139	CH144	287	0	0	154	NC
				140	CH145	289	0	0	155	NC
				141	CH146	291	0	0	156	NC
				142	CH147	293	0	0	157	NC
				143	CH148	295	0	0	158	NC
				144	CH149	297	0	0	159	NC
				145	CH150	299	0	0	160	NC
				146	CH151	301	0	0	161	NC
				147	CH152	303	0	0	162	NC
				148	CH153	305	0	0	163	NC
				149	CH154	307	0	0	164	NC
				150	CH155	309	0	0	165	NC
				151	CH156	311	0	0	166	NC
				152	CH157	313	0	0	167	NC
				153	CH158	315	0	0	168	NC
				154	CH159	317	0	0	169	NC
				155	CH160	319	0	0	170	NC
				156	CH161	321	0	0	171	NC
				157	CH162	323	0	0	172	NC
				158	CH163	325	0	0	173	NC
				159	CH164	327	0	0	174	NC
				160	CH165	329	0	0	175	NC
				161	CH166	331	0	0	176	NC
				162	CH167	333	0	0	177	NC
				163	CH168	335	0	0	178	NC
				164	CH169	337	0	0	179	NC
				165	CH170	339	0	0	180	NC
				166	CH171	341	0	0	181	NC
				167	CH172	343	0	0	182	NC
				168	CH173	345	0	0	183	NC
				169	CH174	347	0	0	184	NC
				170	CH175	349	0	0	185	NC
				171	CH176	351	0	0	186	NC
				172	CH177	353	0	0	187	NC
				173	CH178	355	0	0	188	NC
				174	CH179	357	0	0	189	NC
				175	CH180	359	0	0	190	NC

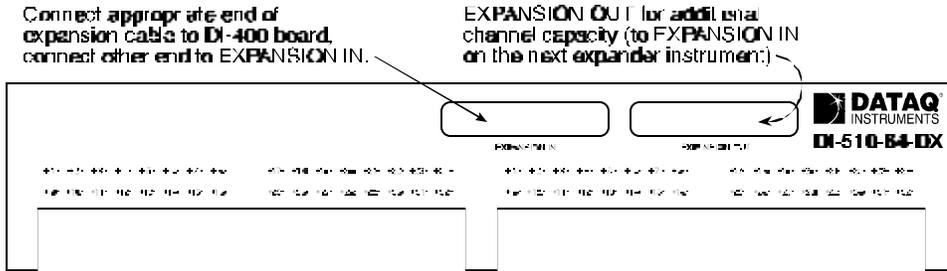

Enabling Channels for Acquisition with WINDAQ Software

WINDAQ recording software features a channel selection grid for enabling or configuring channels for acquisition. A typical grid looks similar to this:

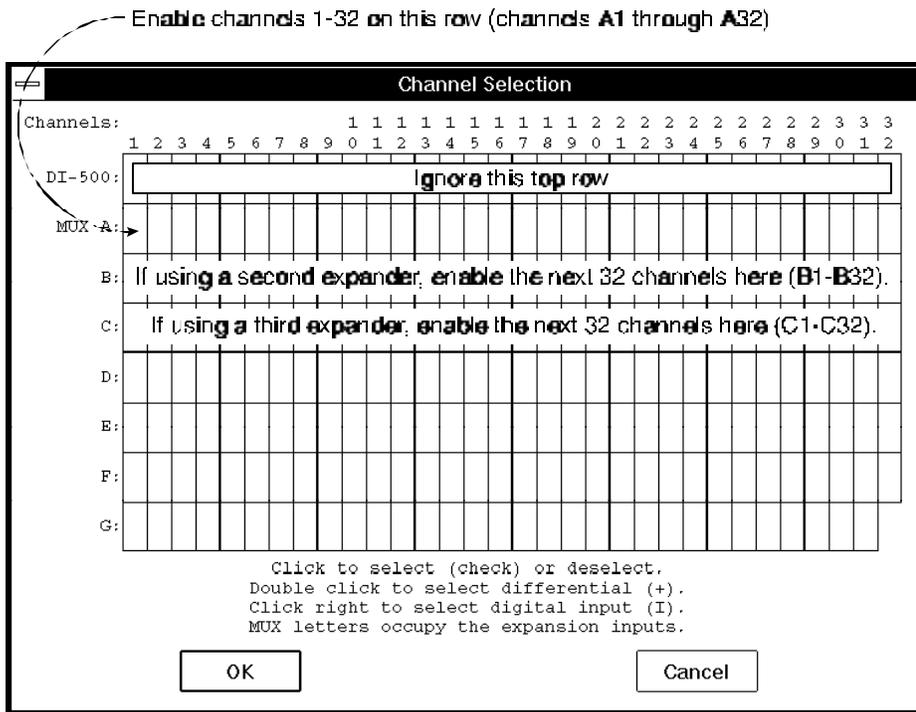

The grid is displayed in WINDAQ/Pro or WINDAQ/Pro+ by pointing to the Edit menu and dragging down to Channels... Each box in this grid represents an input channel. An input channel is enabled by clicking the desired box. Where in the grid you click, which mouse button you click with, and how many times you click the mouse button determines whether the input channel is enabled for differential operation, for operation defined by the DI-5B module (if used), or for differential operation between a pair of channels (refer to Appendix E of the WINDAQ/Pro and WINDAQ/Pro+ User's Manual for complete details).

5. Calibration

This section provides calibration procedures for the A/D and D/A subsystems of DI-400 Series boards.

Required Equipment

A/D Calibration

- A precision DVM with resolution as a function of the A/D gain range being calibrated. Consult the following chart for the minimum resolution required of your DVM at the indicated gain:

A/D Gain	Minimum DVM Resolution
1	2.44mV
2	1.22mV
4	0.61mV
8	0.305mV
10	0.244mV
100	24.41 μ V

- A stable voltage source with a stability specification equal to or greater than the resolution shown above at the highest gain to be calibrated.

OR


- An alternative is to use a voltage calibrator with resolution as shown above at the highest gain to be calibrated.

D/A Calibration


- A precision DVM with resolution of at least 1 mv.

A/D Calibration

Calibration of the board's A/D subsystem is performed with the following connections:

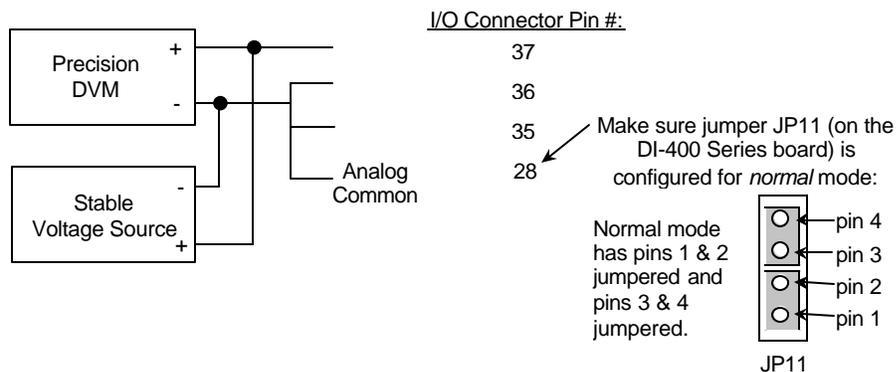

Or if you are using the alternative voltage calibrator, the following figure illustrates the necessary connections:

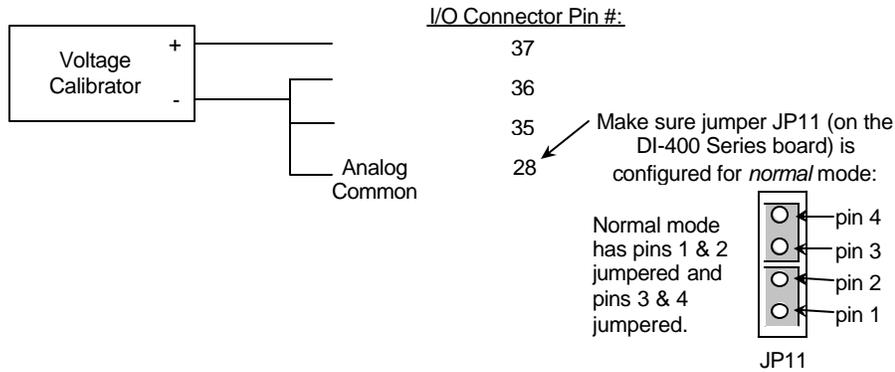

When either of the above circuits are connected, run WINDAQ/Pro or WINDAQ/Pro+ recording software and follow these steps:

1. In WINDAQ/Pro or WINDAQ/Pro+, enable channels 1, 2, and 3 (i.e., point to the Edit menu and drag down to Channels..., etc. Complete channel enabling details can be found in the WINDAQ/Pro and WINDAQ/Pro+ User's Manual). Also select a screen format that enables you to see all three channels onscreen at the same time.


2. Set the burst rate to 50,000 Hz as follows:



- a. Point to the Edit menu, drag down to Preferences, and release the left mouse button. This displays the Edit Preferences submenu.



- b. In the Edit Preferences submenu, click Maximum Sample Rate... This displays the maximum sample rate dialog box:

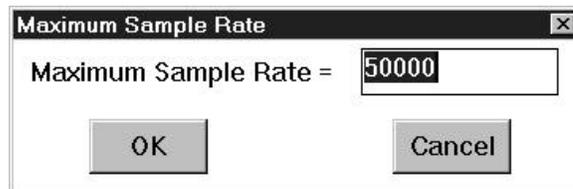


- c. Enter 50000 in the text box and close the dialog box by clicking the OK button.

3. Set the sample rate to 50 as follows:




- a. Point to the Edit menu and drag down to Sample Rate... This displays the sample rate dialog box:

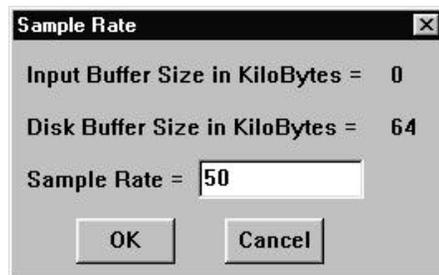



- b. Enter 50 in the text box and close the dialog box by clicking the OK button.

4. Select channel 1 (if not already selected):

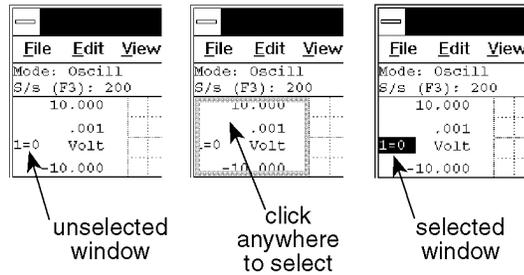

When selected, a box surrounds the variable waveform assignment indicator, indicating that the channel is selected for adjustment.

5. Select the average acquisition mode and set the gain for each channel as follows:




- a. Point to the Edit menu and drag down to Channel Settings... This displays the “Channel 1 Settings” dialog box.



- b. Click the Average button in the Acquisition Method section of the dialog box.

Click here to select the average mode.

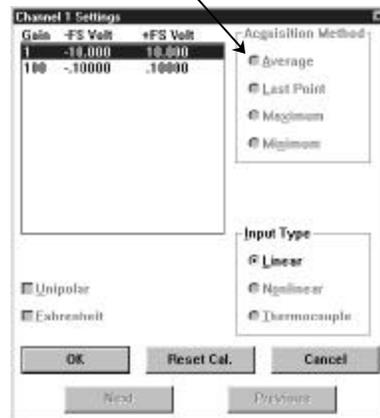

- c. Click on the gain factor 1 in the top left corner of this dialog box to set channel 1’s gain to 1.



- d. Click the Next button at the bottom of the dialog box to display the “Channel 2 Settings” dialog box.



e. Repeat steps b and c for channel 2.



f. Click the Next button at the bottom of the dialog box to display the “Channel 3 Settings” dialog box.



g. Repeat only step b for channel 3.



h. Now click on the gain factor 8 (if you have a –PGH model instrument) or 100 (if you have a –PGL model instrument) in the top left corner of this dialog box to set channel 3’s gain to the highest possible setting.



i. Click the OK button to close the “Channel 3 Settings” dialog box.

6. Select channel 1 again if not already selected (refer to step 4 if you do not remember how to select a channel for adjustments).


7. Set the instruments A/D converter to it’s full dynamic range on channel 1 as follows:




a. With channel 1 selected, point to the Scaling menu and drag down to Show Dynamic Range.

8. Repeat steps 6 and 7 for channels 2 and 3.


9. Adjust the ADC Offset pot until WINDAQ software’s channel 2 numerical display reads zero volts (refer to the illustration at the end of this procedure for pot locations and descriptions).

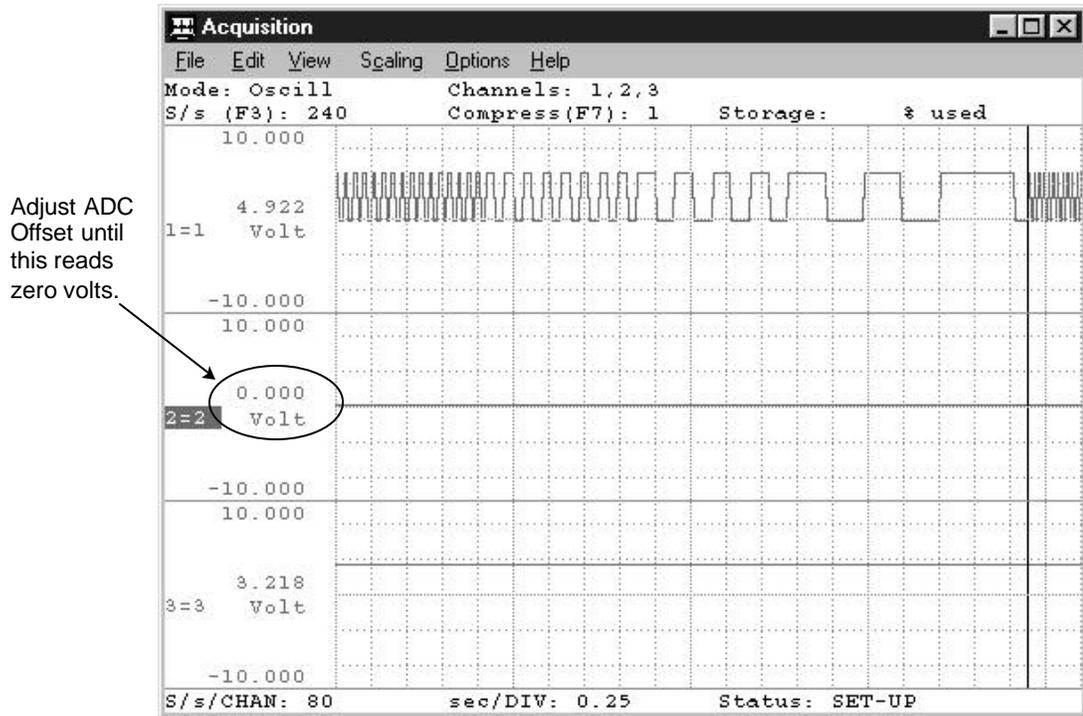

- Adjust the PGA Offset pot until WINDAQ software's channel 3 numerical display reads zero volts (or as close as possible, since this pot is a much finer adjustment than in the previous step). This adjustment causes the ADC Offset (adjusted in the previous step) to increase slightly. This is normal, it is a back-and-forth, give-and-take type of adjustment.

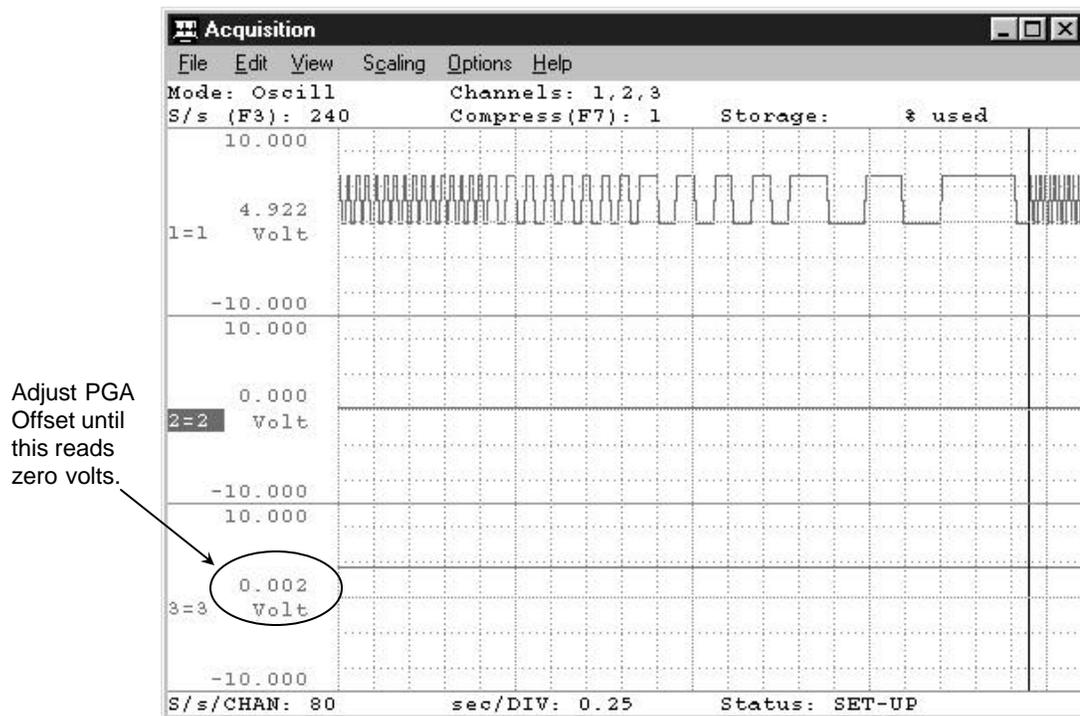

11. Repeat steps 9 and 10 until both channel's numerical display reads zero volts (or as close as possible).
12. Using the voltage source, apply a voltage that is as close as you can get to the full scale input range of your DI-400 Series instrument without exceeding it. For example, apply 9.5V (you can use a fresh 9 volt battery) for a DI-400 or DI-410, or 4.5V for a DI-401.
13. Adjust the Span ADC pot until WINDAQ software's channel 1 numerical display reads the same as the DVM.

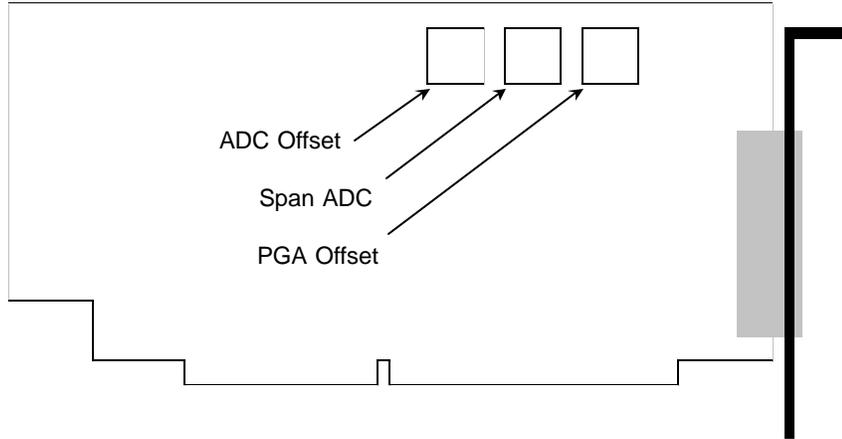


D/A Calibration


The D/A subsystem of your DI-400 Series instrument is calibrated before it leaves our facility and in normal use, should never need to be re-calibrated. Contact Dataq Instruments technical support if you have reason to suspect you need D/A calibration.

6. Block Diagram

DI-400 and DI-410 Block Diagram

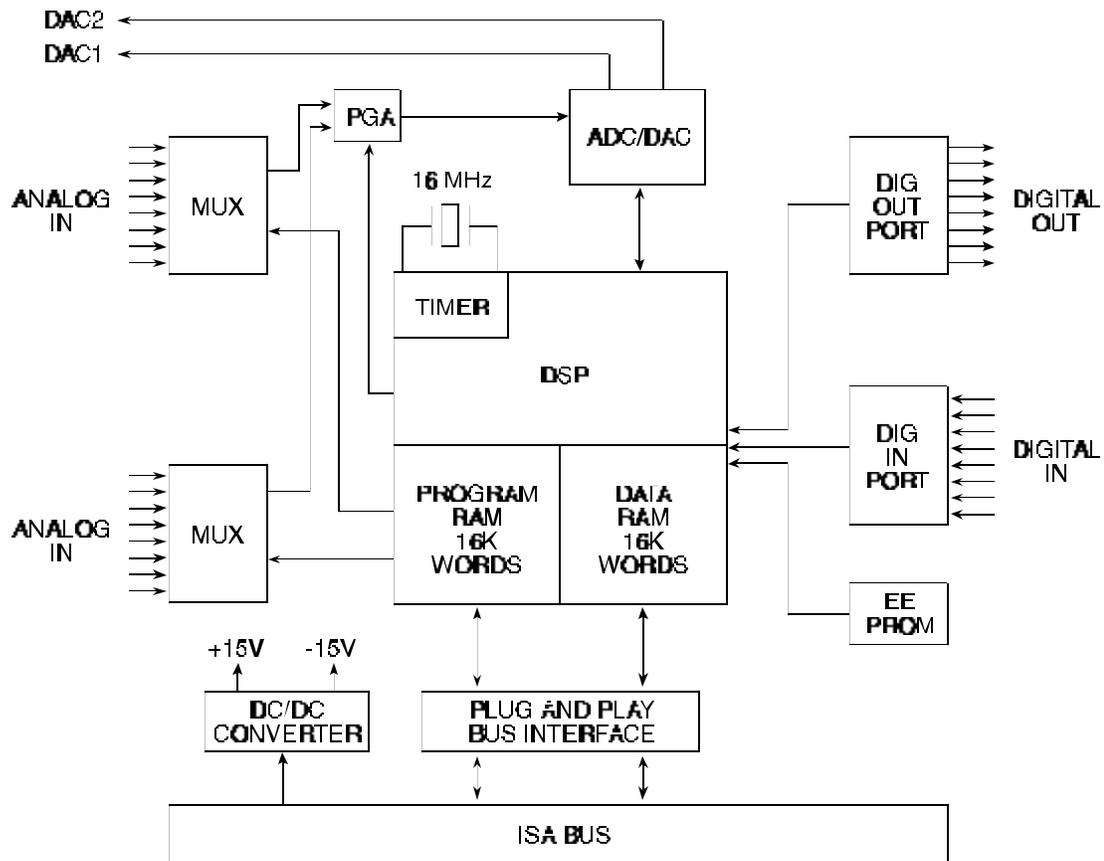

DI-401 Block Diagram

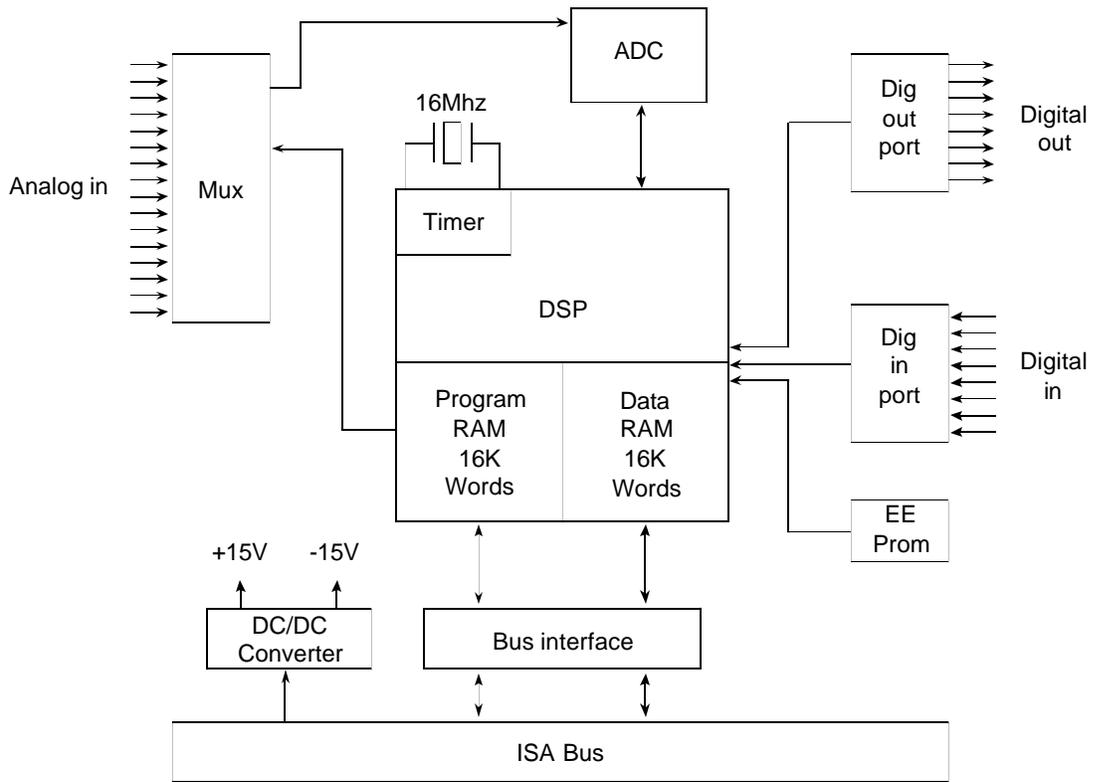



DATAQ Instruments, Inc.
241 Springside Drive
Akron, Ohio 44333
Telephone: 330-668-1444
Fax: 330-666-5434
E-mail: support@dataq.com

Direct Product Links

(click on text to jump to page)

[Data Acquisition](#) | [Data Logger](#) | [Chart Recorder](#) | [Thermocouple](#) | [Oscilloscope](#)