

## DI-808 Quick Start

**1** Apply power and connect the DI-808 Ethernet port to an Ethernet port on your computer.

**2** Type `http://169.254.67.83` into your browser window and you should see an authentication request.

If you are unable to connect to the page, ensure that your PC is using DHCP and not a static IP. Check with your office's IT personnel if you are not sure.

Note: Your PC does not require internet access to connect to the device.

**3** Login as the Administrator:  
Default username: *admin* Default password: *admin*

**4** Full documentation is embedded in the device and is accessible upon login.

For further details visit the product page at [dataq.com/808](http://dataq.com/808) or contact support at [dataq.com/ticket](http://dataq.com/ticket)

